Get Started

All you need to know to get going.

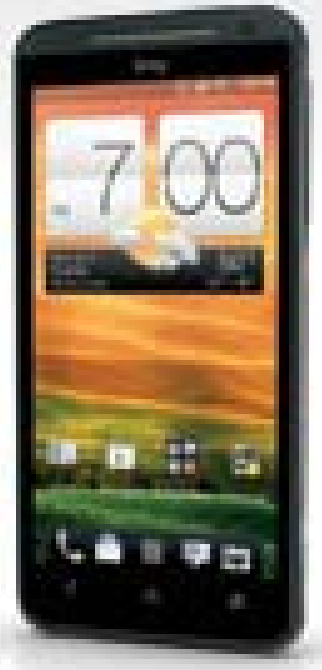

HTC EVO™ 4G LTE | Sprint

Welcome!

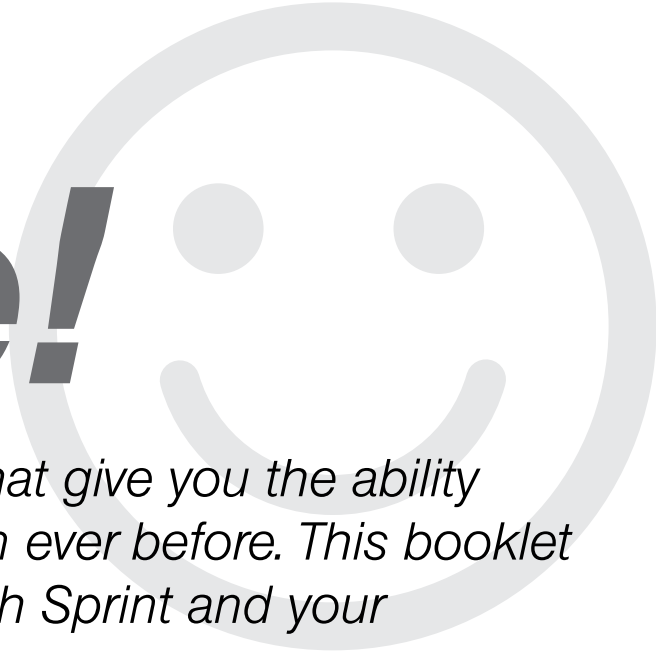

Sprint is committed to developing technologies that give you the ability to get what you want when you want it, faster than ever before. This booklet introduces you to the basics of getting started with Sprint and your HTC EVO™ 4G LTE.

Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your phone.

***Note:** Available applications and services are subject to change.*

Using This Guide

This Get Started guide is designed to help you set up and use your new HTC EVO 4G LTE. It's divided into four sections to help you find the information you need quickly and easily.

- ***Get Ready*** *— page 1 — Find out what you need to do before you use your phone the first time, including activating Sprint service on your phone.*
- ***Android™ Basics*** *— page 4 — Learn some basics about how to move around on your phone, use the Home screen, and enter text. If you're familiar with Android phones, you can probably skip these pages (although a refresher course never hurt anyone).*
- ***Use Your Phone*** *— page 10 — Take advantage of your phone's features and Sprint services, from the basics (Making Calls) to the more advanced (using Facebook, Email, and more).*
- ***Tools & Resources*** *— page 33 — Find useful tips for your phone and discover resources and other helpful Sprint information. For additional information including the full User Guide, videos, tutorials, and community forums, visit sprint.com/support.*

Your HTC EVO 4G LTE

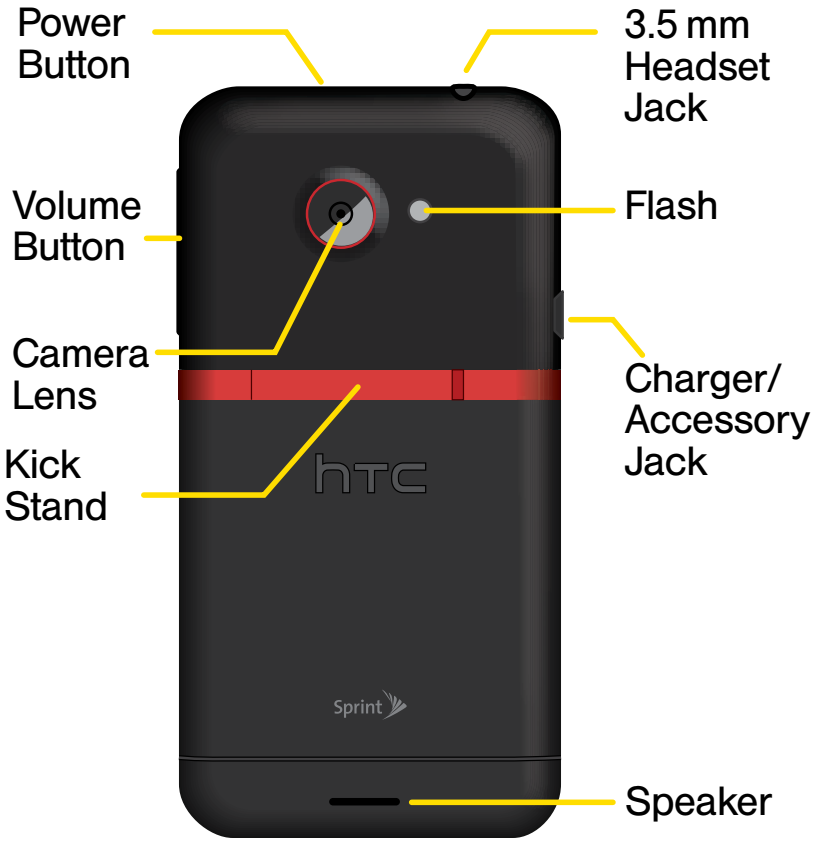

Get Your Phone Ready

Charge the Battery

1. Insert the small end of the USB cable into the charger/accessory jack on the left side of your phone.
2. Insert the larger end of the USB cable into the AC adapter.
3. Plug the AC adapter into an electrical outlet. (Note: charging may take up to three hours.)

Turn the Phone On

► Press and hold the **Power** button to turn your phone on.

Turn the Screen On and Off

- To quickly turn the display screen off, press the **Power** button on top of the phone.
- To turn the screen on and display the unlock screen, press the **Power** button.

Unlock the Screen

► Flick the ring up to unlock the screen.

Turn the Phone Off

► Press and hold the **Power** button on top of the phone and then touch **Power off** to turn the phone off.

Activate Your Phone

Activate Your Phone

- If you purchased your phone at a Sprint Store, it is probably activated and ready to use.
- If you received your phone in the mail, and it is a new Sprint account or a new phone number, your phone is designed to activate automatically when you first turn it on. You will see a **Hands Free Activation** screen at startup. When it's finished, touch **OK** to continue. To confirm your activation, make a phone call.
- If you received your phone in the mail and it is going to be activated on an existing number (you're swapping phones), go to sprint.com/activate and follow the instructions.

When you have finished, make a phone call to confirm your activation. If your phone is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.

Setup Application

The setup application helps you set up various options and applications, including setting up your Google™ Account.*

Complete the Setup Application

1. When the phone is first turned on, you will see the **Hands Free Activation** screen, which may be followed by a **PRL Update** screen and a **Firmware Update** screen. Touch **OK** after each of these steps. (Your phone may reboot after activation or updates.)
2. After restart, touch the android icon to begin.

   Note: *You can touch **Skip** or **Next** to postpone setting up any or all of the options listed below. Later on, you can launch the setup application from the **All Apps** panel.*

   - **Scheduled sync** — Choose to sync data for mail, contacts, calendar, and other services automatically or manually.

- **Set up Wi-Fi network** — Select an available Wi-Fi network or Add Wi-Fi network to add a new one.
- **Get an HTC Account** – Choose to sign in with your HTC Account or create a new one.
- **Tell HTC** — Choose whether to allow HTC to collect anonymous data in the background about how you use your phone.
- **Use Google location** — Choose to allow Google's location service to collect anonymous information, to use My Location for Google searches and other features, or both.
- **Set up your free 25 GB Dropbox account** – Choose to create a Dropbox account or sign into an existing one.
- **Set up accounts** — Touch any of the services listed to set up an account for **Google**, **Exchange ActiveSync**, **Mail**, **Dropbox**, **Evernote for HTC Sense**, **Facebook,** and more.
- **Transfer my stuff** — Move contacts, messages, and calendar events from your old phone to your new one.

3. When you have finished transferring your stuff, touch **Finish**.

** You do not need to sign up for a Google Account to use your phone; however, to download apps from Google Play™, you must link your phone to a Google Account.*

Android™ Basics: Getting Around Your Phone

Move Around Your Phone's Menus and Screens Using Gestures

Your phone's touchscreen lets you control everything through various types of touches, or gestures.

Touch: When you want to press onscreen buttons, select items such as application and settings icons, or type, simply touch the screen with your finger. A light touch works best.

Touch and hold: To open the available options for an item (for example, options for a contact), simply touch and hold the item.

Drag: To move items on your phone's touchscreen, drag across the touchscreen horizontally or vertically. For example, touch and hold a widget on your Home screen and then drag it to another area on the Home screen.

Flick: To scroll quickly through a list, flick across the touchscreen (drag quickly and release). When you're flicking through a long list, touch the screen to stop scrolling.

> ***Tip:*** *When you drag or flick a list, a scroll bar may appear. Drag the scroll bar to move quickly to a specific letter (A-Z).*

Pinch and Spread: "Pinch" the screen using your thumb and forefinger to zoom out, or "spread" the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)

Your Home Screen

Home Screen

Touch ⌂ to display your Home screen.

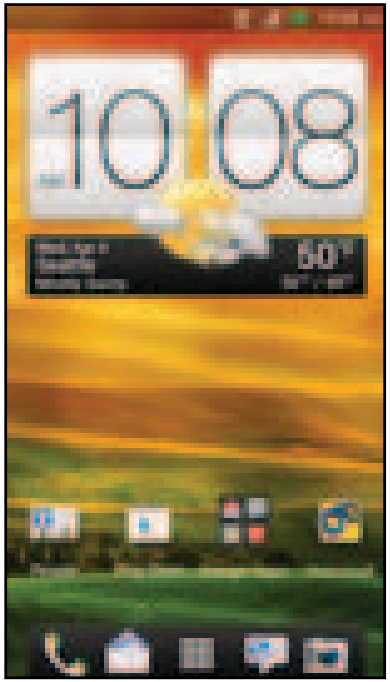

Notifications Panel

When you see a notification icon on the left side of the status bar, drag the status bar down to display the Notifications panel. Touch a notification to open the related application, such as **Messages**, **Call History**, or **Calendar**.

To close the panel, drag the bottom bar up or just touch <.

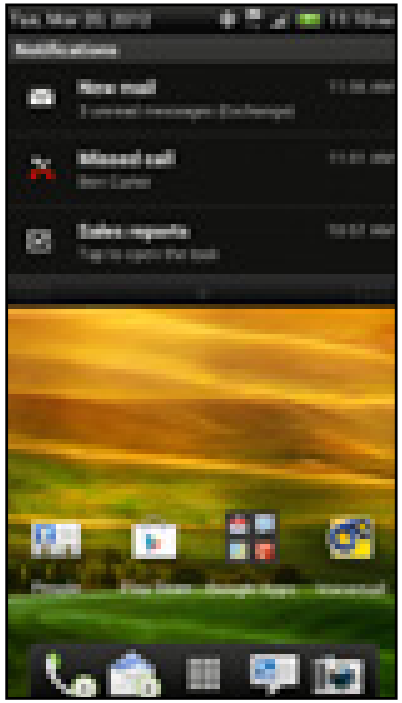

Your Home Screen

Viewing Your Extended Screens

Your phone's Home screen extends horizontally to seven full screens. This gives you room to customize your phone and put the things you need front and center, just a swipe away.

- To display the Home screen, touch ⌂ from any screen.
- To view extended screens, flick the screen left or right. There are three additional screens on each side of the Home screen.

Add Items to Your Home Screen or Extended Screen

1. Touch and hold an empty spot on either the Home screen or an extended screen.
2. Touch the Widgets, Apps, or Shortcuts tab.
3. Drag a widget, app, or shortcut to a Home screen thumbnail where you want to add it.

   Note: *Touching ⌂ from the Home screen brings up a thumbnail view of all screens. Touch a thumbnail to display a screen.*

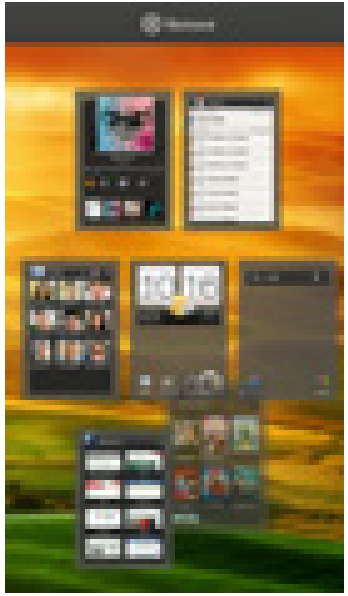

Keys and Icons

Keys

Just below the touchscreen, you'll find a row of static keys that let you perform specific functions.

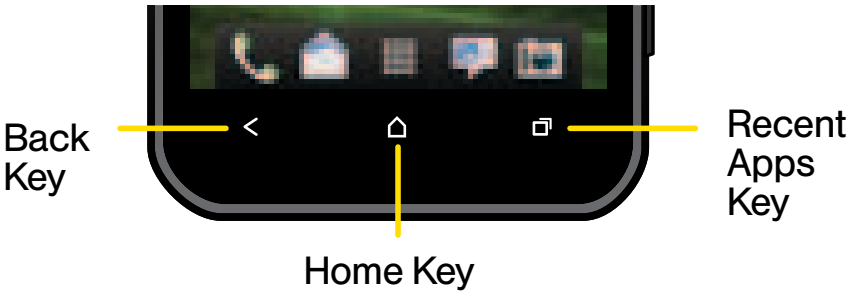

- **Back Key** ( ) – Touch to return to the previous screen view.
- **Home Key** ( ) – Touch to return to the Home screen.
- **Recent Apps Key**( ) – Touch to open context-specific menus.

Open Applications

- If an application is on one of your screens, just touch it to open it.
- If an application is not available from your Home screen, touch ( ) (if you're not already on the Home screen), touch ( ) to display the applications list, and then touch the application from the alphabetical list. You may have to scroll down to find the application you're looking for.

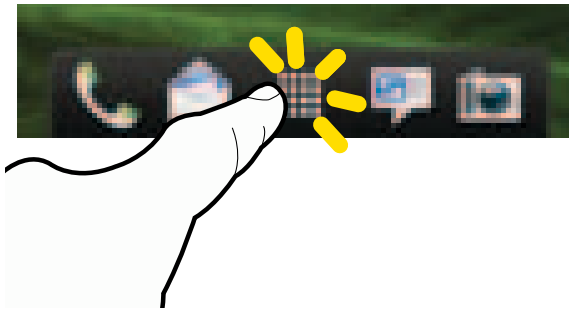

Typing

Onscreen Keyboards

Your phone lets you choose between two onscreen keyboards: HTC Sense Input and Swype.

Language and Keyboard Settings

You can change your text entry options through the Language & keyboard settings menu. These may include selecting onscreen keyboard options (HTC Sense Input or Swype), word prediction, user dictionary, and locale (language and region).

► Touch > > **Settings** > **Language & keyboard** and then touch an option.

- To select a HTC Sense Input keyboard type, touch **HTC Sense Input** > **Advanced settings** > **Keyboard types** and select **Standard**, **Phone**, or **Compact**.
- To change Swype settings, touch **Swype**.
- To change the language and the style for your keyboard, touch **System language**.
- To change your predictive text input settings for the HTC Sense Input keyboard, touch **HTC Sense Input** > **Advanced settings** > **Word prediction**.

HTC Sense Input Keyboard

Use the HTC Sense Input keyboard to enter text one letter at a time.

Typing

Swype Keyboard

Swype® lets you enter a word with one continuous motion. To enter a word, just drag your finger over the letters.

- To enter the small number or symbol at the top of a key, touch and hold the key.
- To enter several symbols, touch 12#.
- To enter apostrophes in common words (like “I’ll”), drag through the apostrophe key.
- To correct a word, double-tap it. Swype shows a small menu of other word options. Swype might also show a menu if it can’t guess your word.
- If Swype doesn’t know a word, touch individual letters to enter it. Swype remembers, so next time you can just drag over the letters.

Use Your Phone: Voicemail

Set Up Your Voicemail

All unanswered calls are automatically transferred to your voicemail, even if your phone is in use or turned off. You should set up your voicemail and personal greeting as soon as your phone is activated:

1. Touch > to display the phone dialpad, and then touch and hold 1.
2. Follow the voice prompts to create your password and record your name and greeting.

Sprint strongly recommends setting a voicemail password. Without a password, anyone who has access to your phone can access your messages.

Retrieve Your Voicemail

► Touch > and then touch and hold 1.

From any other phone:

1. Dial your wireless phone number.
2. When your voicemail answers, press *.

Visual Voicemail

You can also use your phone's Visual Voicemail application, which lets you see and choose which messages you want to listen to.

► Touch > > **Voicemail** and then touch a message to listen to it.

Make Phone Calls

Make a Phone Call

1. Touch > to display the phone dialpad.
2. Touch the digits of the number you want to call on the dialpad. Touch to delete one or more digits.
3. As you enter digits, any matches with numbers already in People will appear. Touch an entry to call the matching number or continue entering the rest of the phone number.
4. Touch Call to place the call.

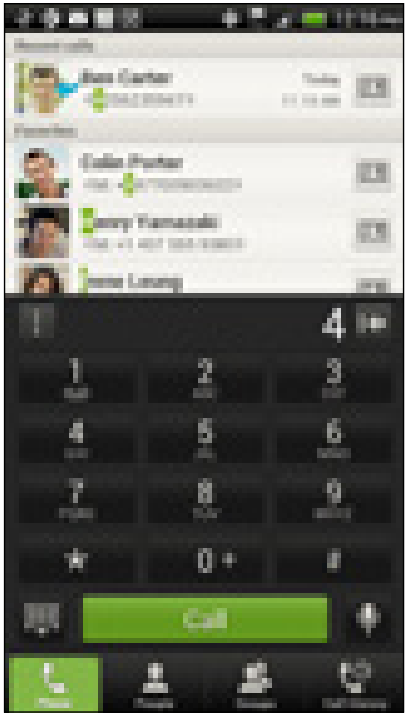

Answer Calls

Answer an Incoming Call

- If the display is active, touch **Answer**.
- If the display is not active, drag into the ring to answer the call.

  Note: *While on a call and holding the phone near your face to speak, the touchscreen automatically turns off to avoid accidental screen presses. When you move the phone away from your face, the touchscreen automatically turns back on.*

- Touch to mute the microphone. Touch to unmute the microphone.
- Touch to route the phone's audio through the speaker or through the earpiece.

  Warning: *Because of higher volume levels, do not place the phone near your ear during speakerphone use.*

In-Call Options

Touch during a call to display a list of available in-call features. Touch an option to select it. The following options may be available through the Options menu:

- **Add call** initiate a three-way call and touch to join two currently active calls.
- **Flash** to accept another incoming call and put the first caller on hold. Touch **Flash** again to talk to the first caller.
- **People** to display your contacts list.
- **Contact card** to bring up the contact information of the person you are talking to.

People

Your phone's People application lets you access and manage contacts from a variety of sources, including Gmail, Exchange, Facebook, contacts synced from your computer, and old-fashioned contacts entered by hand.

View Contacts

1. Touch > > **People**.
2. Scroll through the list to view your contacts.

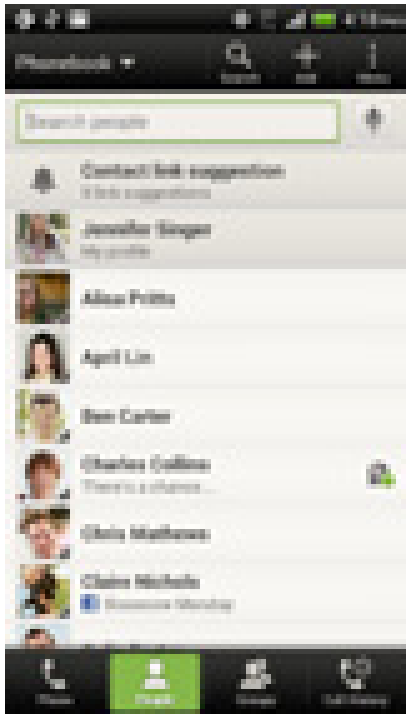

People

Add a New Contact

1. Touch Home > Apps > **People** > New Contact.
2. Add as much or as little information as you want.
   - To add information in a field, touch the field to display the onscreen keyboard.
   - To assign a number type (such as Home, Mobile, Work, etc.), touch the label next to the number field.
   - To assign a picture, touch the icon next to the name, select photo source, and touch or take a picture.
3. Touch **Save** when you're finished.

Note: *If you have contacts associated with your Gmail Account, they are automatically synced with your phone.*

Edit Contacts

1. Touch Home > Apps > **People**.
2. Touch a contact to open it, and then touch **Edit**.
   - Touch a field to add or edit information.
3. Touch **Save** when you're finished.

Note: *To delete a contact, touch* Menu > ***Delete***.

Sync Contacts

When you change one of your contacts on your phone, your phone automatically updates your other social networking accounts. Also, your phone updates your People and social networking accounts whenever you change a friend in your social networking accounts.

Messages

Send a Message

1. Touch Home > Apps > **Messages** > **Compose**.
2. Enter a phone number or email address, or search for and select a contact.
3. Type your message.
4. Touch Attach and then attach a photo, video, or audio to your message.
5. When you are finished, touch **Send**.

***Note**: For information on taking pictures and recording videos with your phone, see "Camera & Camcorder" on page 24.*

Access Messages

View all your text and multimedia messages in one place.

► Touch Home > Apps > **Messages** > **All messages**.

Read and Reply to Messages

► Touch Home > Apps > Messages.

- To open a message, touch it.
- To reply to a text or multimedia message, open it and enter your reply in the text box at the bottom.
- To forward a text message, touch the message (do not touch a link or a phone number) to open the options menu, and then touch **Forward**.

Be a hero. Don't drive distracted.

Focus on driving

sprint.com/focusondriving

Email Setup

You can link multiple email accounts to your HTC EVO 4G LTE, including Exchange server accounts. You can set up email accounts through the setup application or directly through the settings menu or email application.

Set Up a Gmail™ Account

You likely signed into your Gmail Account when you first turned your phone on. If not, you can add it or another account at any time.

1. Touch > > **Settings** > **Accounts & sync**.
2. Touch **Add** > **Google**.
3. Follow the instructions to set up or sign in to a Gmail Account.

   Note: *Although you need a Gmail Account to use certain features such as Google Play™, you do not have to use Gmail as the default account for your phone.*

Note: *When setting up a new Google Account, you will be prompted to add a secondary email address. Enter a second Gmail address or any other email address from which you currently send and receive email. This address is used to authenticate your account should you ever encounter problems or forget your password. It is strongly encouraged for Android users so you can regain access to Google services and purchases on your phone.*

Email Setup

Set Up an Email Account

1. Touch > > **Mail**.
2. Touch **Other (POP3/IMAP)** on the Choose a mail provider screen.
3. Follow the instructions to sign in to your email account.
   - If you're adding an account from a common email provider, such as Windows Live Hotmail or Yahoo Mail, enter your email address and password and touch **Next**. Your email should be set up automatically.
   - Enter the **Account name** and **Your name** and touch **Finish setup**.

   Note: *Follow the instructions to provide the required information.*

Set Up a Microsoft® Exchange® Account

Use the **Mail** application to set up Exchange server work email accounts. Contact your IT administrator for account sign-in requirements.

1. Touch > > **Mail**.
2. Touch **Microsoft Exchange ActiveSync**.
3. Enter the Exchange server account details and then touch **Next**.
   - Contact your Exchange Server administrator for required sign-in information.
4. Select the type of information you want to synchronize and touch **Finish setup**.

Using Email

Access Email Messages

1. Touch > > Mail.
   - Select the email account you want to use.
2. From the Inbox, tap the message you want to view.

Send an Email Message

1. Touch > > Mail.
   - Select the email account you want to use.
2. Touch .
3. Enter an email address or contact name.
4. Enter a subject and a message.
   - To add attachments, touch > **Attach file** and select an attachment.
5. Touch .

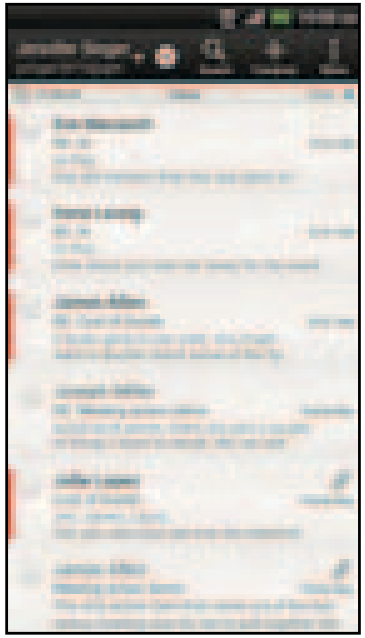

Connect to a Wi-Fi Network

When you're in range of an available Wi-Fi network you can use your phone's Wi-Fi feature to access the Internet and other data services.

1. Touch > > **Settings**.
2. Touch the Off/On switch next to **Wi-Fi**.
3. Touch **Wi-Fi** to display a list of available networks.
4. Touch a Wi-Fi network to connect. If necessary, enter the security key and touch **Connect**.
   - When you're connected to a Wi-Fi network, you'll see the Wi-Fi icon ( ) in the status bar.

Note: *When you're not using Wi-Fi, touch the Off/On switch next to* ***Wi-Fi*** *on the phone settings to extend battery life.*

Tip: *To toggle Wi-Fi on and off easily, you can place a widget on one of your screens. Touch and hold the screen and touch the Widgets tab. Touch* ***All Widgets*** *>* ***Wi-Fi****, and then drag it to the Home screen you want.*

Web

Find sports scores, news, and weather. Shop online. Your phone's built-in browser lets you surf the Web just the way you want to.

Go Online

Touch > **Internet**.

- To go to a specific website, touch the address bar and enter the Web address.
- To access and manage bookmarks, touch and touch **Bookmarks** in the browser options menu.

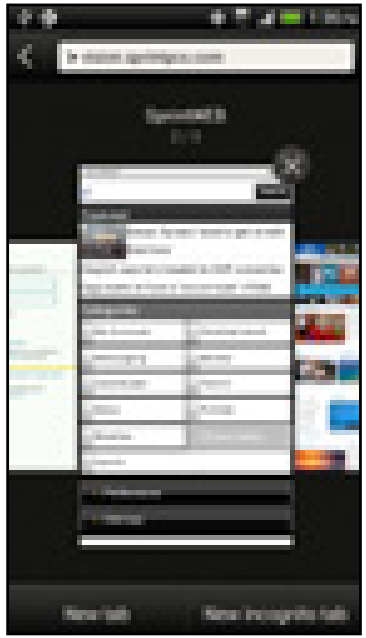

Google Play™

Google Play gives you access to thousands of applications to boost your productivity and increase your fun.

Download Applications and Games

1. Touch Home > Apps > Play Store.
2. The first time you visit Play Store, touch **Accept** to accept the Terms of Service.
3. To find what you want quickly:
   - Browse through featured apps and games. Scroll through the options or browse by categories within **Apps**, **Music**, **Books**, **Movies**, or **Games**
   - Search for an app or game. Touch Search on the Play Store Home screen, enter the name or keyword, and then touch Enter on the keyboard.
4. Touch an app or game to read a description and user reviews.
5. Touch **Download** (for free apps) or the price button (for paid apps).

   Note: *You must have a Google (Gmail™) Account set up on your phone to purchase and download apps from the Google Play™ Store.*

Opening Installed Apps and Games

► Touch Home > Apps. Locate the downloaded item and touch it to launch.

Social Networking: Facebook and Flickr

If you didn't set up your favorite social media applications using the setup application (see "Complete the Setup Application" on page 2), you can do it from the Accounts menu.

Set Up Social Networking Accounts

1. Touch > > **Settings** > **Accounts and sync**.
2. Touch **Add**, select a type (such as **Facebook** or **Flickr**), and then follow the instructions to complete setup.

Access Your Social Networking Accounts

1. Add Friend Stream to your Home or extended screen (see next section).
2. Enter your required sign-in information.
3. Send status updates, share pictures, read updates, and more.

Put Friend Stream on Your Home Screen or an Extended Screen.

Make accessing your Facebook page even easier by placing a Friend Stream widget on one of your screens.

1. Touch and hold the screen and touch the Widgets tab.
2. Touch **All Widgets** > **Friend Stream**.
3. Touch and hold the layout you want and then drag it to the Home screen you want.

Camera & Camcorder

Take a Picture

1. Touch > > Camera.
2. Touch and release to take the picture.

Record a Video

1. Touch > > Camera > .
2. Frame your subject in the screen.
3. Touch to begin recording. Touch again to stop.

Camera and Camcorder Settings

- From the camera or camcorder screen, touch the onscreen buttons to switch to camera or camcorder, select the front or back camera, change flash mode, and add effects.
- While in camera or camcorder mode, touch for additional settings options.

Camera & Camcorder

View Pictures and Videos

1. Touch > > **Gallery**.
2. Touch **Camera shots**, **All photos**, or **All videos**.
   - Touch a picture to display it full size.
   - Touch the play and pause icons to control video playback.

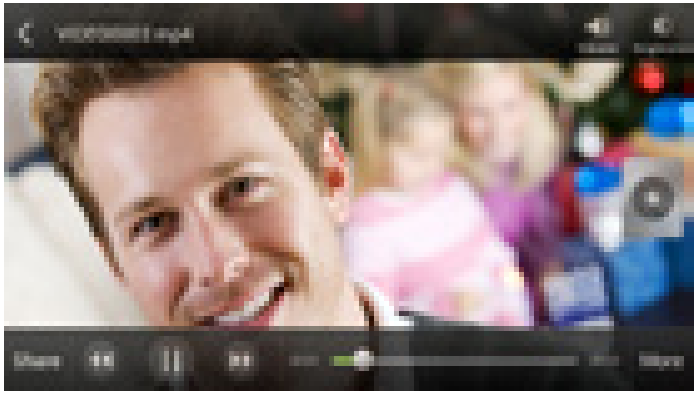

Share Pictures and Videos

1. Touch > > **Gallery**.
2. Touch an album to display the thumbnails.
3. Touch and hold a thumbnail and then touch **Share**.
4. Choose a share method, such as **Bluetooth**, **Mail**, **Messages**, **Facebook for HTC Sense**, **Flickr**, or others.

Bluetooth

Pair and Connect with a Bluetooth® Device

1. Touch > > **Settings** > **Bluetooth**.
   - If Bluetooth is not turned on, touch the **Bluetooth** check box to turn it on.
2. Select an available device and follow the prompts to pair the devices. You may be required to enter a passcode (often 0000) to complete pairing.
3. Once you're paired, your connection should launch. You'll see in the status bar.

Share Contacts, Files, or Pictures Using Bluetooth

1. Open the application containing the file you want to share (for example, touch > > **Gallery**).
2. Locate the file you want to share.
   - You can send pictures and videos directly from the camera or from Gallery, Calendar, People, Music, and Voice Recorder. Not all devices will be able to receive all file types.
3. Touch and hold the file and select **Share** > **Bluetooth**.
4. Touch the name of the device to which you're sending the file. (If prompted, touch **OK** to turn Bluetooth on.)

Google Mobile™ Services

Your HTC EVO 4G LTE provides easy access to a variety of Google services including Gmail™, Google Talk™, Google Mobile Wallet™, Google Maps™, Google Navigation, and YouTube™.

- **Gmail** – The Google mail service. Your Gmail Account lets you access many Google-related services as well as Google Play. (See “Set Up a Gmail™ Account” on page 17.)
- **Google Talk** – Google’s instant messaging service. Touch > > **Talk** to begin using the service. (If you’re signed in to Gmail, you are already signed in to Google Talk.)
- **Google Mobile Wallet** – A smart, virtual wallet that stores your payment cards, offers, and more on your phone and online. Touch > > **Wallet** > **Get Started** to set up and begin using the app.
- **Google Maps** and **Google Navigation** – The Google location programs let you track your current location, view real-time traffic situations, and receive detailed directions to your destination. They also provide search tools where you can locate places of interest or an address on a vector or aerial map, or view locations in street level. Touch > > **Maps** or **Navigation** to begin using the services.
- **YouTube** – View and share videos on one of the Web’s most popular video sites. Touch > > **YouTube** to browse through and view available videos. Sign in with your Gmail Account to upload your own videos.

GPS Navigation

Choose a mapping and navigation solution that's right for you.

Note: *Before using any navigation programs, make sure your phone is set to allow location detection, and then select which sources you want to use.*

Touch > ***Settings*** > ***Location****. Select* ***Google's location service, Location setting*** *and/or* ***GPS satellites*** *for location sources.*

Navigation

1. Touch > > Navigation.
2. Follow the onscreen instructions to access, launch, and use navigation.

Google Maps™

► Touch > > Maps.

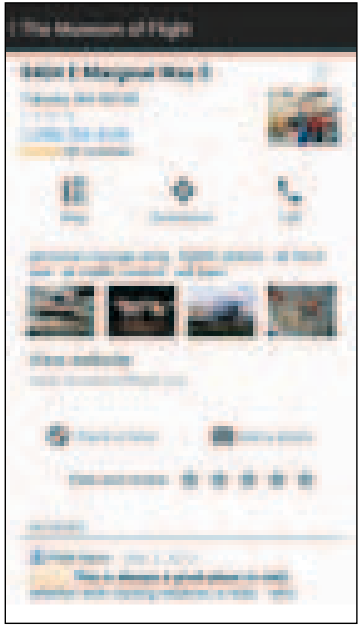

Sprint Hotspot

Connect up to eight Wi-Fi-capable devices to the Internet using your HTC EVO 4G LTE as a mobile hotspot.

Set Up and Activate Your Sprint Hotspot

Note: Risks can be associated with connecting to the public Internet. Your phone allows you to create a mobile hotspot. It is recommended that you use a password or other possible steps to protect against unauthorized access.

1. Touch > > **Sprint Hotspot** and touch the check box next to **Sprint Mobile Hotspot** to turn on the hotspot.
2. Enter your settings.
   - **Router name (SSID)** – Enter a unique name for your hotspot.
   - **Security** – Select the type of security you want: **WEP (128)**, **WPA (TKIP)**, or **WPA2 (AES)**. Other users can access your mobile hotspot only if they enter the correct password.
   - **Password** – Enter a suitable password for your hotspot. (Note: Password length and allowable and required characters may vary according to the security type you selected.)

Connect a Device to the Mobile Hotspot

1. Enable Wi-Fi on your device (for example, a laptop computer).
2. Select the Network SSID for your mobile hotspot and enter the password if prompted.
3. When "Connected" appears on your phone, launch your Web browser to confirm you have an Internet connection.

Music

Open Your Music Player

1. Touch Home > Apps > Music > My phone.
2. Touch ▼ and then select the music category.
   - Music is sorted by artists, albums, songs, playlists, and genres. Touch a category's icon, and then touch the song or playlist you want to play. Touch ⋮ > **Shuffle All** to randomly play all songs.

** You will need to load music onto your phone or the microSD card before you can listen to your music. See "Getting Music."*

Getting Music

Before you can listen to your music, you need to load songs into your phone. Here's one way to do it:

1. Use the supplied USB cable to connect your phone to an available USB port on your computer.
2. Touch and hold the status bar and then drag it down to open the Notifications panel.
3. Touch **Select to change USB connection type**, and then tap **Disk drive**.
4. On your computer, locate the new removable disk drive (your phone's microSD card), open it, and open or create a music folder.
5. Copy music files from your computer to the music folder, follow the procedures to safely remove the drive, and then disconnect the phone from the computer.

Sprint Applications

Access additional exclusive Sprint features right from your phone.

Sprint TV & Movies

Live TV and video on demand. Complete episodes and clips of your favorite primetime shows and movies. Over 50 channels of news, entertainment, weather, sports, and streaming music.

1. Touch > > **Sprint Zone** > **Sprint Suggests**.
2. Find and touch **Sprint TV & Movies** to download and install the app.
3. In the top bar, touch **Home**, **Live TV**, **On Demand**, **Movies**, or **Shop** to find what you want to watch.
   - For quick access, touch a featured item in the center of the screen or select a live option in the bottom bar.

Visit sprintchannels.mobitv.com for more information on channels and pricing.

NASCAR Sprint Cup Mobile

Keep up to date with your favorite drivers and all the news and live feeds from the world of NASCAR.

1. Touch > > **Sprint Zone** > **Sprint Suggests**.
2. Find and touch **NASCAR Sprint Cup Mobile** to download and install on your phone.
3. After installing, open the **NASCAR** app and follow the onscreen instructions until you reach the main NASCAR Sprint Cup Mobile page.

Tip: *For additional Sprint applications and features, search for them on the Google Play Store home page.*

Sprint Applications

TeleNav GPS Navigator™ lets you see and hear turn-by-turn directions to a known address, or find nearby restaurants, stores, banks, or gas stations. Get information about traffic and alternate routes.

Register TeleNav GPS Navigator

1. Touch Home > Apps > **Sprint Zone** > **Sprint Suggests**.
2. Touch **TeleNav GPS Navigator** to download and install the app.
3. Follow the onscreen instructions to install and register your phone.

Use TeleNav GPS Navigator

1. Touch Home > Apps > **TeleNav GPS Navigator**.
2. Select an option and follow the onscreen instructions to get directions, view maps, or access additional services and options.

Note: *Before using any navigation programs, make sure your phone is set to allow location detection, and then select which sources you want to use.*

Press Apps > ***Settings*** > ***Location.*** *Select your location source.*

Tools & Resources: Settings

Explore ways to customize your phone, set permissions, update your phone, and more in the **Settings** menu.

Accessing Settings

1. Touch > > **Settings**.
2. Select the settings category you want to change. To select or clear check boxes (a common setting method), touch the check box.

   Categories include:

   - Personalize
   - Accounts and sync
   - Location
   - Security
   - Privacy
   - Accessibility
   - Display and gestures
   - Sound
   - Call
   - Apps
   - App associations
   - Storage
   - Power
   - Language & keyboard
   - Date & time
   - Connect to PC
   - Developer options
   - Activate this device
   - System updates
   - About

For detailed information about settings, please see the ***User Guide*** at sprint.com/support.

Battery-Saving Tips

Manage the Display Brightness and Screen Timeout

► Touch > > **Settings** > **Display and gestures** > **Brightness** or **Sleep** to modify your settings.

Use Task Manager to Stop Applications

1. Touch > > **Task Manager**. Currently running applications are listed.
2. Touch the “X” to the right of any applications you want to stop.

Manage Your Phone’s Wireless Functions

Disable the Sprint Hotspot, Wi-Fi, Bluetooth, and GPS functions of the phone when you’re not using them.

► Touch > > **Settings** and disable any of the functions under Wireless & networks that are not in use.

— or —

► Add the Power Control widget to your Home screen or an extended screen. (See “Add Items to Your Home Screen or to an Extended Screen” on page 6 for more information about adding widgets.)

For more useful tips about battery care and safety, see the ***User Guide*** at sprint.com/support.

Manage Your Account

Online: www.sprint.com

- Make a payment, see your bills, enroll in online billing.
- Check minute usage and account balance.
- See or modify the details of your Sprint service plan.
- Get detailed instructions and download content.

From Your Sprint Phone

- Touch > to check minute usage and account balance.
- Touch > to make a payment.
- Touch > to access a summary of your Sprint service plan or get answers to other questions.

From Any Other Phone

- Sprint Customer Service: Dial **1-888-211-4727**
- Business Customer Service: Dial **1-888-788-4727**

Resources

Resources For Your Phone

- This ***Get Started Guide*** to get you up and running.
- **Web** – Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your HTC EVO 4G LTE.
- **Sprint Zone** – Touch > > **Sprint Zone** to access account services, Sprint news, phone information, suggested applications, and more.

Survey

Please tell us what you think about your new phone.

We are interested in your initial impressions of this new Sprint phone. Within two weeks of your phone purchase, please go to the website http://labs.sprint.com/sprintphonesurvey to complete a brief survey. Your feedback will help us provide the wireless features and services you want most.

Thank you for choosing Sprint.

Responsibility

At Sprint, environmental responsibility is more than talk. We're continuously working to reduce our carbon footprint and decrease our use of natural resources.

So where is my user guide?

To support our increased responsibility efforts, we've put expanded instructional materials online for you. Just visit sprint.com/support from any computer to access your complete user guide and other support materials.

What else has Sprint been doing?

Plenty. To find out just what we've been up to, visit sprint.com/responsibility.

This guide is printed with soy inks and contains up to 50% post consumer paper.

Index

A

Answer a Phone Call 12

Apps 22

B

Battery

- Charge 1
- Saving tips 34

Bluetooth 26

C

Camera

- Front 24
- Settings 24

D

Drag 4

E

Email

- Gmail 17
- Microsoft Exchange ActiveSync 18
- POP3/IMAP 18

F

Facebook 23

Flick 4

Flickr 23, 25

Friend Stream 23

Front-facing Camera 24

G

Games 22

Gestures 4

Gmail 17

Google Maps 27, 28

Google Navigation 27, 28

Google Play 22, 31

Google Talk 27

GPS Navigation 28

H

Home Screen 5–6

- Add Items 6
- Customize 6
- Extended 6

I

Internet 20, 21, 29

- see also Web

K

Keyboard 8

- Settings 8

Keys 8–9

Index

M

Make a Phone Call 11
Manage Your Account 35
Maps 27, 28
microSD Card 30
Microsoft Exchange ActiveSync 3, 13, 17, 18
Multimedia Messages 15

N

Navigation 27, 28

P

Personalize 6, 33
Phone Call
    Answer 12
    Make 11
Picture Messages
    see Multimedia Messages
Pictures
    Take 24
Pinch 4
Predictive Text 8

R

Resources 33, 35
Responsibility 36

S

Screen
    Turn On and Off 1
    Unlock 1
Setup Application 2, 3
Shortcuts 6
Sprint Applications 31, 32
Sprint Customer Service 35
Spread 4
Sprint Zone 31, 32
Status Bar 5, 20, 26, 30
Survey 36

T

Tools 33
Touch 4
Touch and Hold 4

U

Unlock Screen 1

V

Videos
    Record 25
    Share 25
Voicemail 10

W

Widgets 6
Web 21
Wi-Fi 20, 29, 34

Y

YouTube 27

The services described in this guide may require a subscription to a service plan and/or may incur additional charges. Not all services will work on all phones. Sprint coverage is not available in all markets. See www.sprint.com/coverage for more details.

Portions of this guide are reproductions of work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

Important Privacy Message. This phone is capable of determining its/your geographical location. To set controls for access and use of your location information by others, touch > ***Settings*** > ***Location***. Select ***Google's location service, Location setting*** and/or ***GPS satellites*** for location sources. Follow any applicable prompts. These settings for the use of location information can be turned on and off. For some applications and services you select, a phone must be turned on and set to allow collection of location information in order to function.

Please be advised that if you use a third-party application, the application may collect your personal information or require Sprint to disclose your customer information, including location information (when applicable), to the application provider or some other third party. Sprint's policies do not apply to these third-party applications. Please carefully review the application's terms of use and/or the application provider's policies for more information about how the application will collect, access, use or disclose your information before using a third-party application. Terms of use and other policies usually are available on the application provider's website.

©2012 Sprint. Sprint and the logo are trademarks of Sprint. Gmail, Google Talk, Google Maps, YouTube, Android, Google Play and Google Mobile Services are trademarks of Google, Inc. ©LTE is a registered trademark of ETSI. Other marks are property of their respective owners.

Printed in Taiwan

91H02068-00M